

BEATTIE[®] INTENSREEN[®] By Reflexite

INSTALLATION GUIDE FOR MAMIYA 645 / 1000s (OPTICS ONLY)

Catalog Numbers:


| | |
|-------|-------|
| 83330 | 83331 |
| 83332 | 83333 |
| 83334 | 83335 |

Instructions:

Before beginning the installation process, please note the position and location of all original components.

1. Remove the focusing screen (including frame) from the camera as per the instructions in the camera manual.
2. Using a small (#2) screwdriver, remove the two screws releasing the spring clip.
3. Because the spring clips are designed for the thicker, original screen, they must be bent slightly to accommodate the thinner Intenscreen. To do this, insert the spring clips upside down (Figure 1). Gently pull up on the spring in order to bend the clips by about 1/16". Remove the screws and clips.

Figure 1

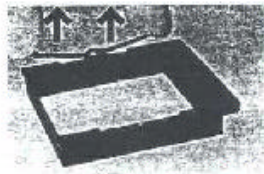

4. Place the Intenscreen focusing screen into the empty frame with the matte (dull) side down.
5. Tilt the frame to 45° and carefully replace the spring clips to their original position (Figure 2) and replace the screw. Repeat step for the other spring clip.
6. Reinstall the focusing screen assembly into the camera as per the instructions in your camera manual.

Figure 2



LIMITED WARRANTY

Reflexite[®] Display Optics, warrants that its products shall be free from defects in materials and workmanship under normal use and service for a period of one year from original date of purchase. Reflexite's obligation under this warranty is limited to repairing or replacing (at its choice) any Beattie Intenscreen[®] product deemed defective upon return from customer. This warranty DOES NOT cover scratches or other damage caused by improper installation, tampering, misuse, abuse or altering.

File this with your important papers. It must accompany any warranty claim.

Covered by one or more of the following US Patents: 4339188 (07/31/82) and 4558922 (12/17/85).

Reflexite[®] is a registered trademark of Reflexite Corporation, Avon, CT, USA

Reflexite[®] Display Optics
1300 Mt. Read Blvd.
Rochester, NY 14606
www.intenscreen.com